

# Installing Bypass Wire Circuit


# Step 1

Disconnect existing wire from solar panel and push the wire into sign. (Use Terminated)



# Step 2

Take the new wire loom and feed through tubing.

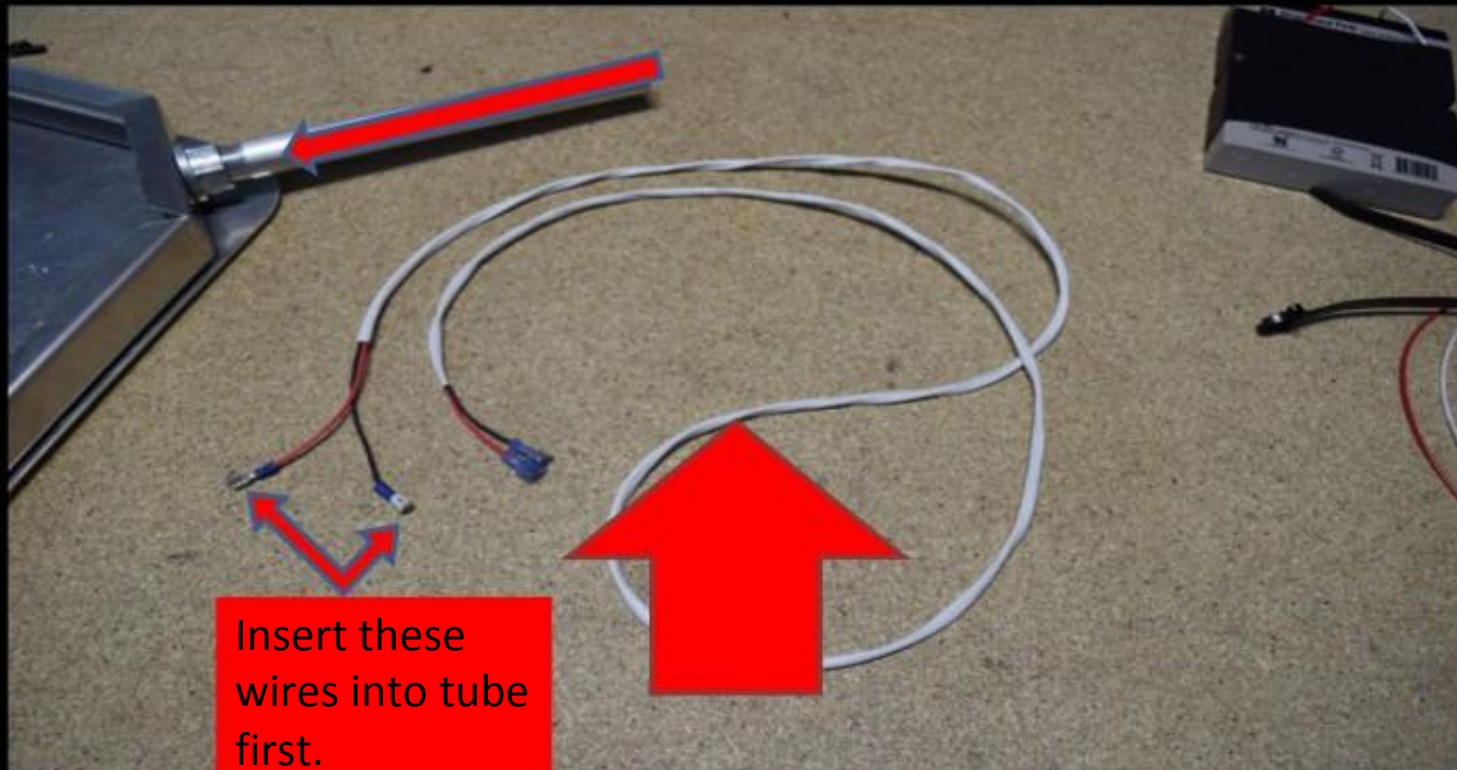

Insert these wires into tube first.

# Step 2 continued\*




# Step 2 continued\*



All the way to  
battery compartment.

# Step 3

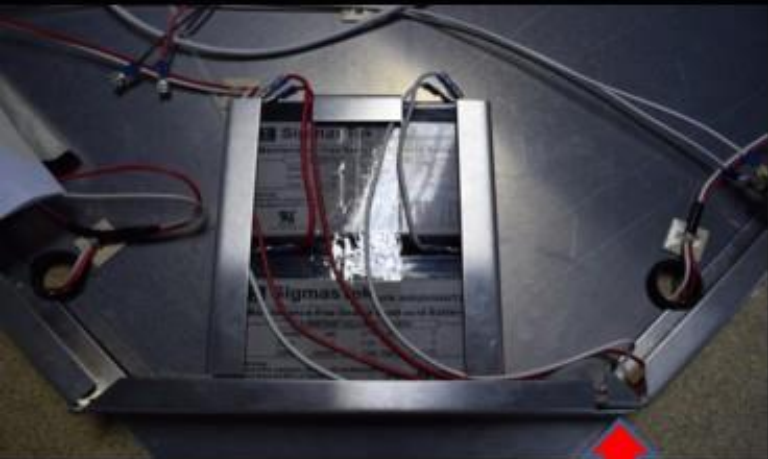


Open battery door.



Remove Batteries.


# Step 4

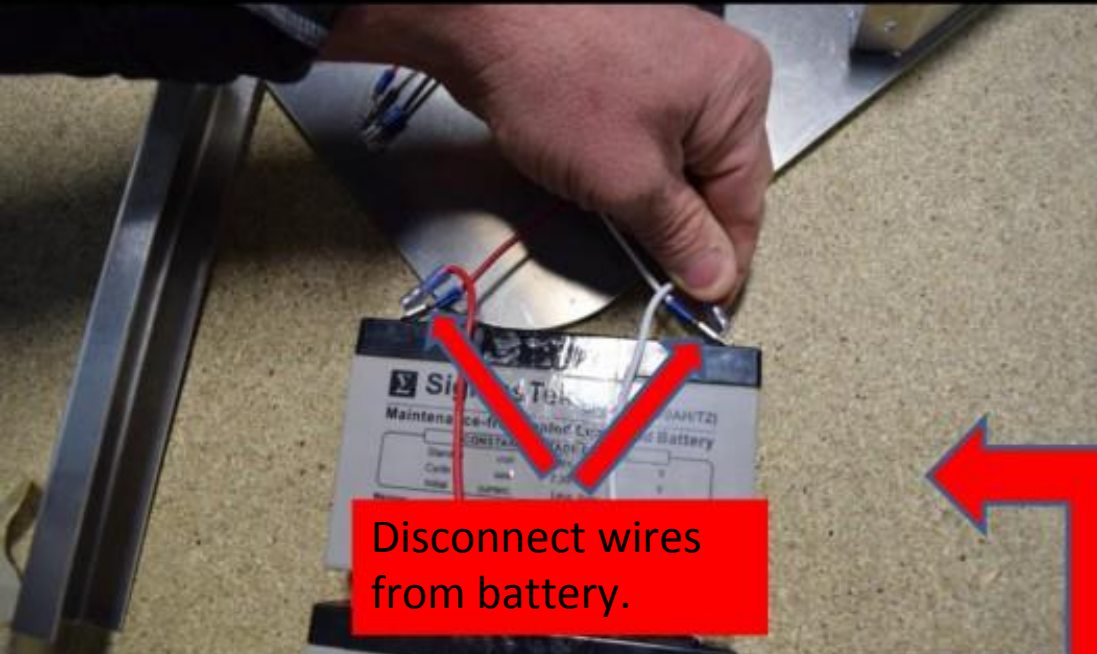

Disconnect wires from battery.




# Step 5

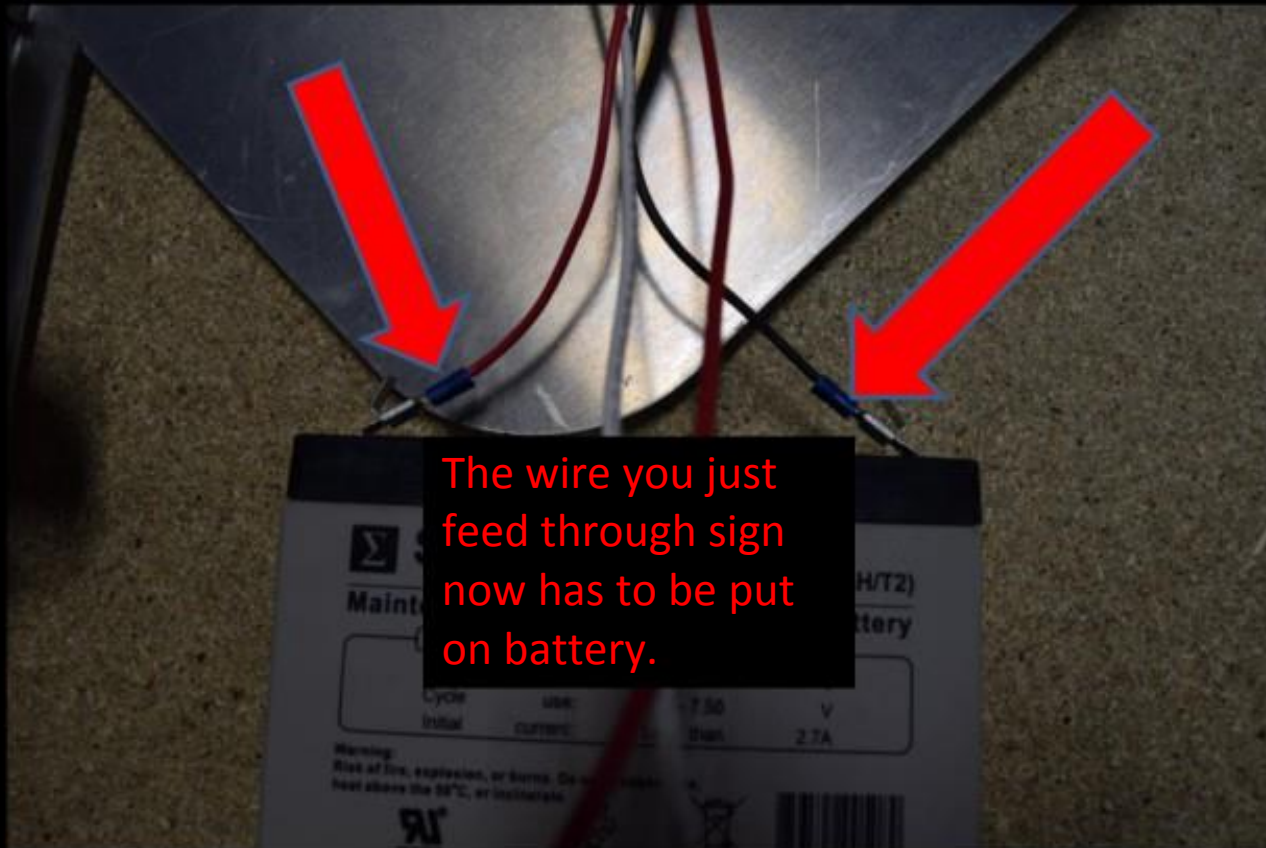




# Step 6

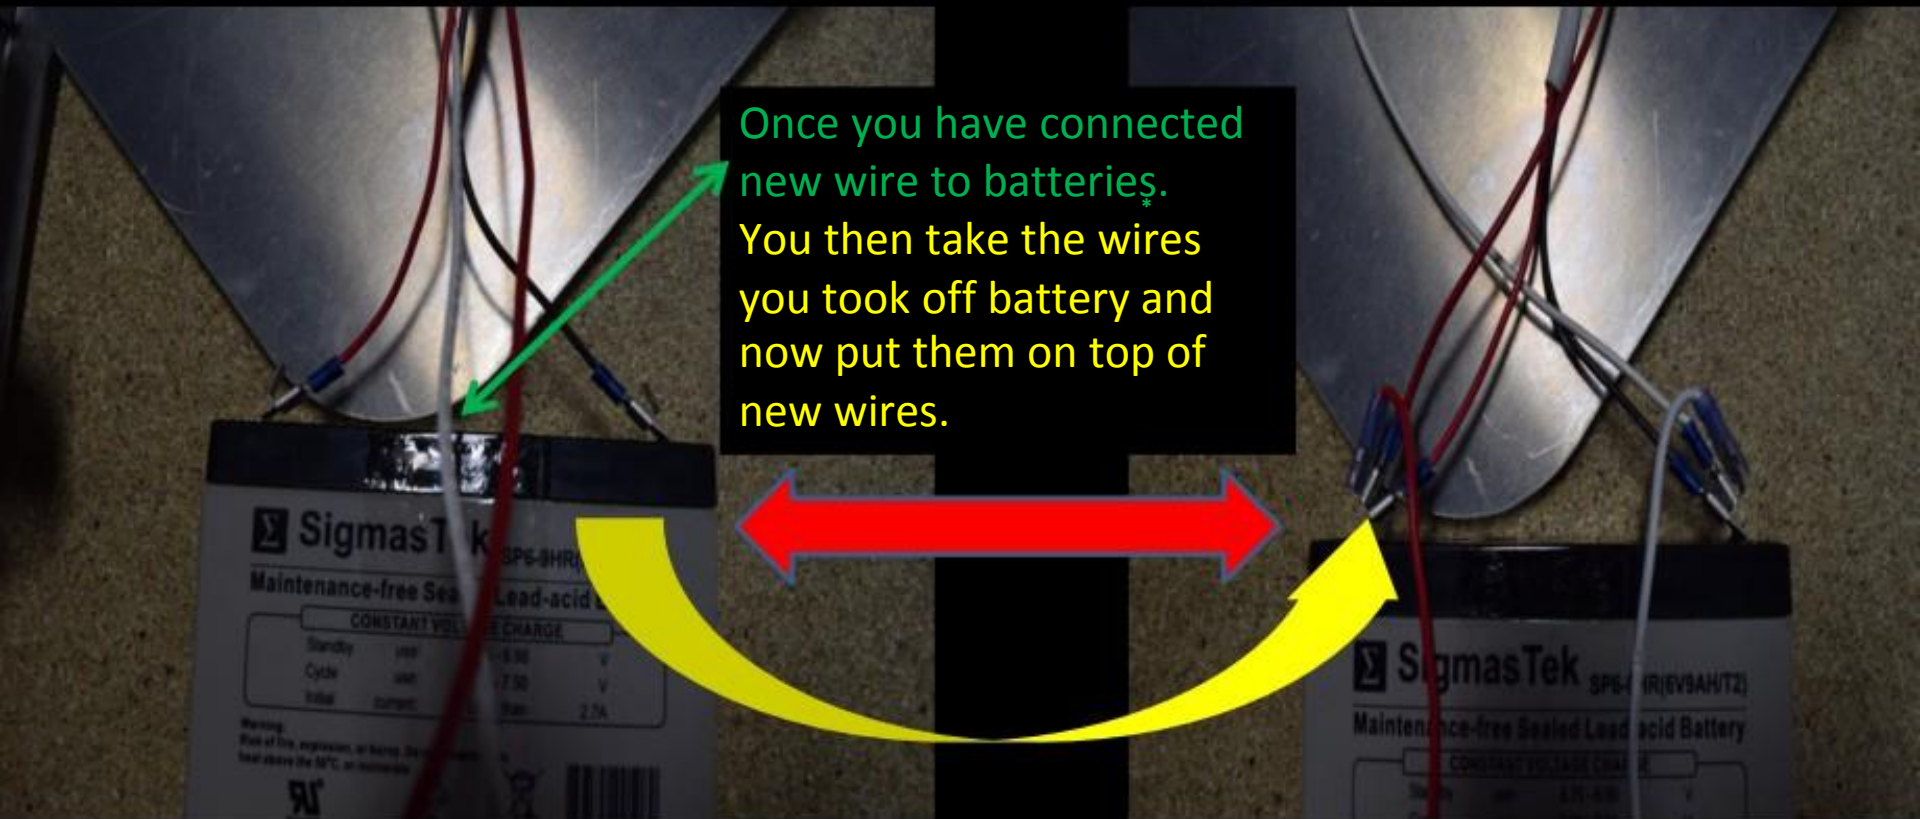

# Step 7

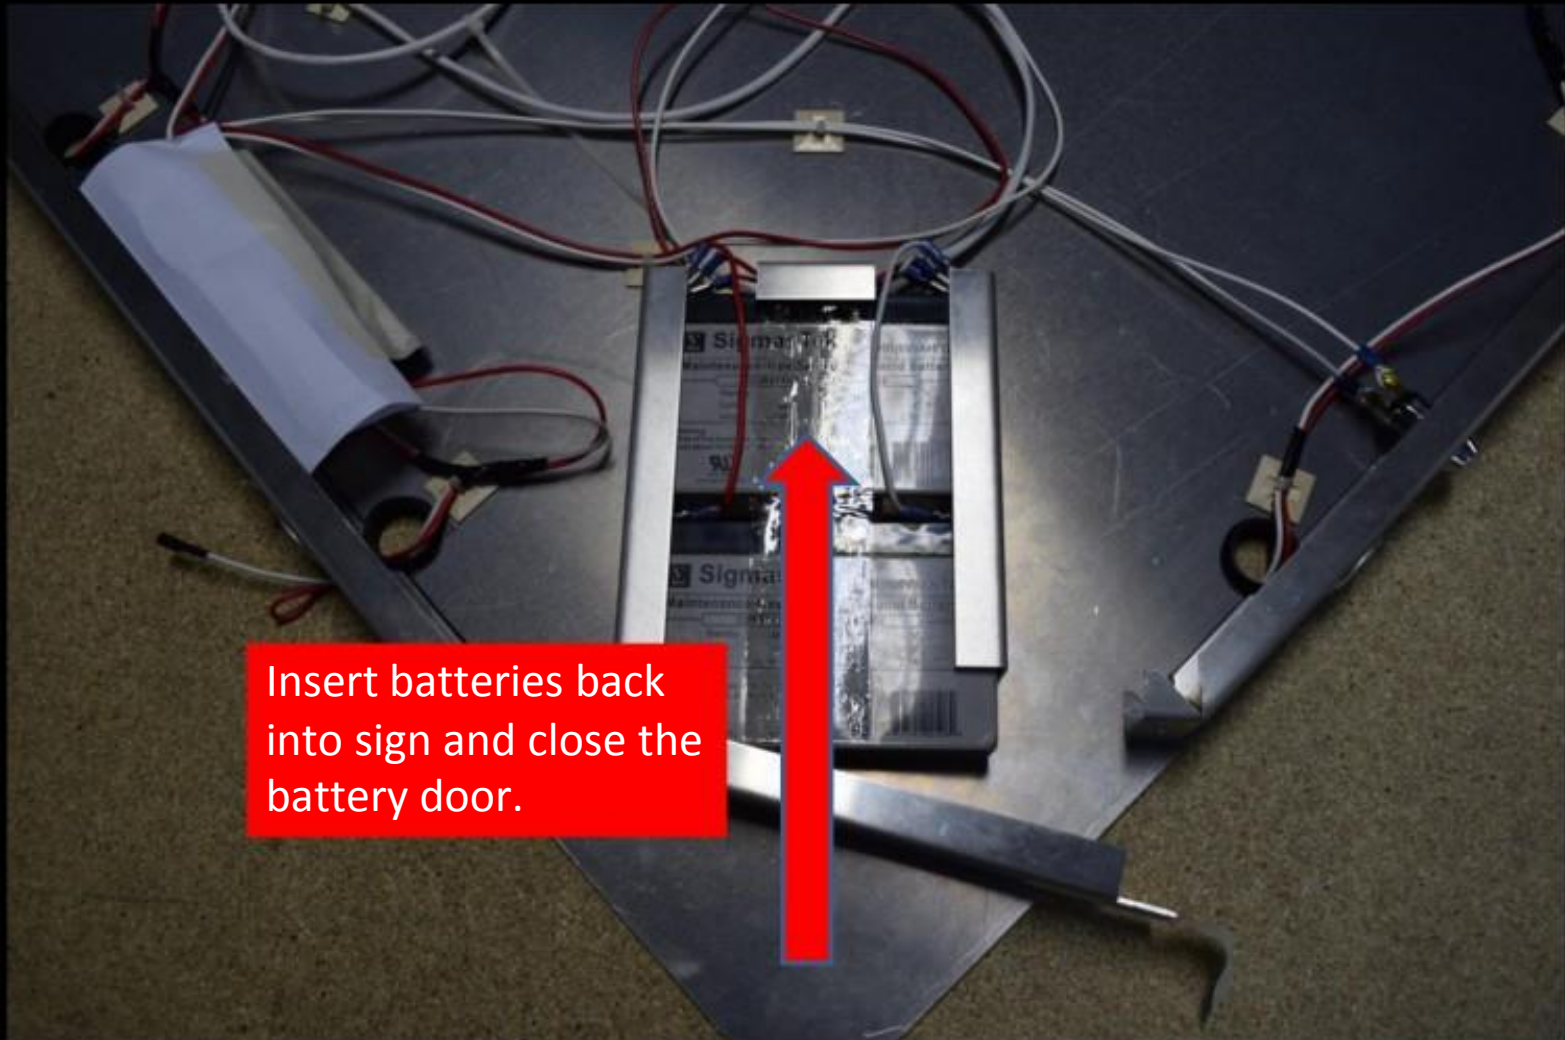

Insert batteries back into sign and close the battery door.